

HOW TO USE THE *NU-WAL*® SYSTEM:



1. Cut fiberglass mat 2" longer than height.



2. Apply saturant to area to be covered.




3. Apply fiberglass mat to wet surface.



4. Trim excess mat where wall meets ceiling.



5. Trim mat at baseboard and window.

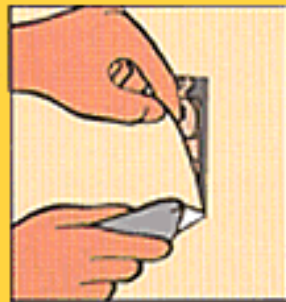

6. Trim mat at outlets, switches, etc.




7. Apply second coat of saturant to wet mat.



8. Apply 1st coat of saturant to adjacent area.



9. Apply mat to 2nd area, over lapping by 1".

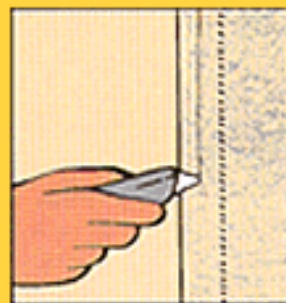

10. Cut down center of overlap (both layers).



11. Remove mat strips on both sides of cut.



12. Apply 2nd coat of saturant (include seam).